

Aeotec Range Extender Zi user guide.

Modified on: Tue, 23 Jun, 2026 at 11:07 AM



Aeotec Range Extender Zi is designed to control devices using the [Smart Home Hub](http://aeotec.com/smarthings) (<http://aeotec.com/smarthings>) or other Zigbee hubs over a wireless connection. It is powered by Aeotec Zigbee technology.

Aeotec Range Extender Zi must be used with a Zigbee hub that supports Zigbee 3.0 to work.

Other languages:

- **Handbuch in Deutsch** (<https://z-wave.freshdesk.com/support/solutions/articles/80001017651-aeotec-range-extender-zi-aeozzga001-de>)

Familiarize yourself with Aeotec Range Extender Zi

Package contents:

1. Aeotec Range Extender Zi
2. User manual

LED States:

- **Fade in and out:** powered but not connected to any network.
- **Flashing Rapidly:** attempting to connect to a Zigbee network.
- **Solid ON/OFF:** connected to a Zigbee network.

Important safety information.


Please read this and the guide(s) at support.aeotec.com/rez carefully. Failure to follow the recommendations set forth by Aeotec Limited may be dangerous or cause a violation of the law. The manufacturer, importer, distributor, and/or reseller will not be held responsible for any loss or damage resulting from not following any instructions in this guide or in other materials.

Range Extender Zi is intended for indoor use in dry locations only. Do not use in damp, moist, and/or wet locations.

Contains small parts; keep away from children.

Connect the Aeotec Range Extender Zi

Aeotec Range Extender Zi can be connected to only a single Zigbee hub at a time, below are steps of various Zigbee hubs that have been tested.

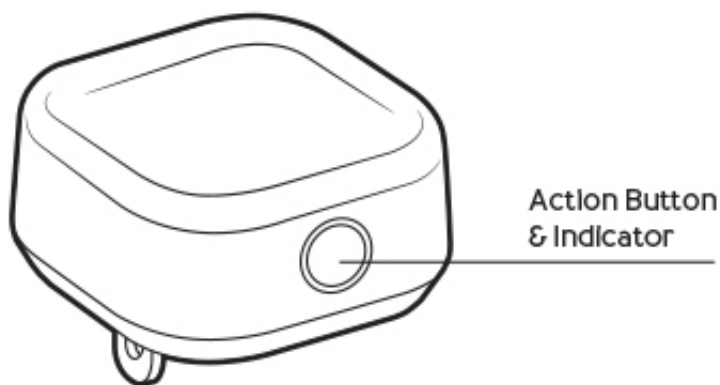

1. Aeotec Smart Home Hub / SmartThings.

1. From the Home screen, touch the **Plus (+)** icon and select **Device**.
2. Select **Aeotec**, touch **Repeater/extender**, and then **Aeotec Range Extender**.
3. Touch **Start**.
4. Choose a **Hub** for the device.
5. Choose a **Room** for the device and touch **Next**.
6. While the Hub searches, move the Range Extender Zi within 15 feet of the Hub and plug it in.
7. **Tap the Action Button** once on the Range Extender Zi - the LED should blink faster to indicate it is attempting to pair.

2. Home Assistant:

1. From Home Assistant dashboard, select **Configurations**.
2. Select **Integrations**.
3. Under Zigbee, tap **Configure**.
4. Select **+**.

5. While the Hub searches, move the Range Extender Zi within 15 feet of the Hub and plug it in.
6. **Tap the Action Button** once on the Range Extender Zi - the LED should blink faster to indicate it is attempting to pair.

3. Hubitat:

1. Select **Devices**.
2. Select **Discover Devices**.
3. Select **Zigbee**.
4. Select **Start Zigbee Pairing**.
5. While the Hub searches, move the Range Extender Zi within 15 feet of the Hub and plug it in.
6. **Tap the Action Button** once on the Range Extender Zi - the LED should blink faster to indicate it is attempting to pair.

A. Hubs that are not listed:

If you do not have any of the hubs listed above for their steps, you will need to refer to your manual on how to set your hub into Zigbee pair mode. Below are general steps for all hubs:

1. Ensure the LED is fading in and out on Aeotec Range Extender Zi.
 - if it is not and the LED is solid, press and hold its action button for 10 seconds to factory reset it. Then ensure it is fading in and out.
2. Set your Zigbee 3.0 hub into **Zigbee pair mode**.
3. **Tap the Action Button** on your Aeotec Range Extender Zi. Its LED will flash rapidly while attempting to connect.

Using Range Extender Zi

Range Extender Zi is now a part of your network. It will appear as a generic repeater device (or any other random device type) in your network. This doesn't matter, as long as it is a part of your network, your hub will optimize your network with the Range Extender as a repeater no matter how it shows up.

There are no options for control, but you would be able to check which Zigbee devices are repeating through it depending on the hub that you have.

1. Home Assistant:

1. From Home Assistant dashboard, select **Configurations**.
2. Under Zigbee, select **Configure**.
3. At the top right, select **Visualization**.
4. This will give you a virtual view of how all your devices are communicating with each other. It is one of the best tools for seeing what devices need a repeater for better communication.

2. Hubitat:

1. Find out what the IP of your Hubitat hub is
2. Open a browser and input: `http://[ENTER YOUR HUBITAT IP HERE]/hub/zigbee/getChildAndRouteInfo`
 1. Replace `[ENTER YOUR HUBITAT IP HERE]`, with the IP address of your Hubitat hub.

Toggle Range Extender Zi LED on or off

Aeotec Range Extender Zi once paired, the LED will default to a permanent ON state. If desired, the LED can be turned on or off.

Steps.

- **Quickly double-tap** the Action Button on Range Extender Zi.
- If the LED was ON, then it'll turn OFF
- If the LED was OFF, then it'll turn ON.

Factory reset your Aeotec Range Extender Zi

Aeotec Range Extender Zi can be factory reset at any time if you come across any issues, or if you need to re-pair Range Extender Zi to another hub.

1. Aeotec Smart Home Hub / SmartThings.

1. Find Range Extender Zi in your SmartThings app, then select it.
2. Tap **More options (3 dot icon)** located at the top right corner, and select **Edit**.
3. Then select Delete.
4. Range Extender Zi should be removed from Smart Home Hub / SmartThings and be factory reset automatically. If the LED on Range Extender Zi is not fading in and out, use the manual factory reset steps below.

2. Home Assistant

1. From Home Assistant dashboard, select **Configurations**.

2. Under Zigbee, tap **Configure**.
3. Select **Integrations**.
4. Under Zigbee, it show should how many devices you have. Click on **X devices** (ie. 10 devices).
5. Select **Aeotec Range Extender Zi**.
6. Select **REMOVE DEVICE**.
7. Select **Ok**.
8. Range Extender Zi should be removed from Home Assistant and be factory reset automatically. If the LED on Range Extender Zi is not fading in and out, use the manual factory reset steps below.

3. Hubitat

1. Select **Devices**.
2. Find Aeotec Range Extender Zi and select it to access its page.
3. Scroll to the bottom and press **Remove Device**.
4. Click on **Remove**.
5. Range Extender Zi should be removed from Hubitat and be factory reset automatically. If the LED on Range Extender Zi is not fading in and out, use the manual factory reset steps below.

A. Manually factory reset your Range Extender Zi

These steps are best used only if your Zigbee hub is no longer available.

1. **Press and Hold the connect button** for (10) seconds.
2. **Release the button** when the LED becomes solid.
3. The LED of Range Extender Zi should be fading in and out.

Next page: [Aeotec Range Extender Zi technical specification](https://aeotec.freshdesk.com/a/solutions/articles/6000248297)

(<https://aeotec.freshdesk.com/a/solutions/articles/6000248297>)