



MANUAL

Integration FIBARO Core with Rithum Switch



Version: 1.2

Date: 28-11-2023



Integration FIBARO Home Center 3 / Lite with Rithum Switch

This manual describes the steps for pairing Rithum Switch with the FIBARO PRO smart home system.

Requirements

- FIBARO Home Center 3 (Lite) met FW 5.100 of hoger
- Min. 1 scene(s) in the FIBARO Systeem
- Rithum Switch
- Router with internet

Note: If there is no restriction on the scenes via Rithum, you can also use the administrator's login details. Use the following instruction to add a user with restricted access to the system.

 
 
 
Create user with authorisation

1. Ga to Access Control
2. Create a new user, for example:
 1. User: VIOLET
 2. Pw: VIOLET-123!
3. Give access to the required scenes
4. Save the settings

Integration with Rithum Switch


It is necessary to activate the Switch via a licence, follow the instructions below to activate the FIBARO Core plug-in for the relevant Rithum Switch.

1. Purchase the license and open the URL, enter the data of the Rithum Switch
2. To do this, go to Settings > System > About

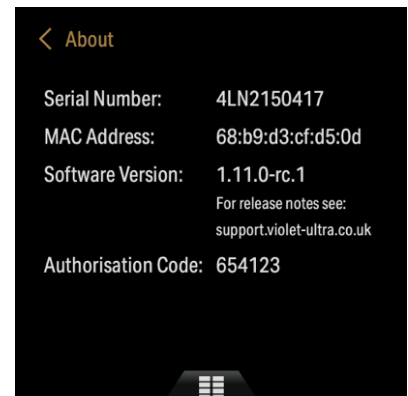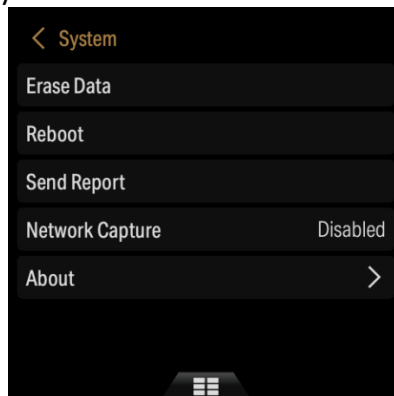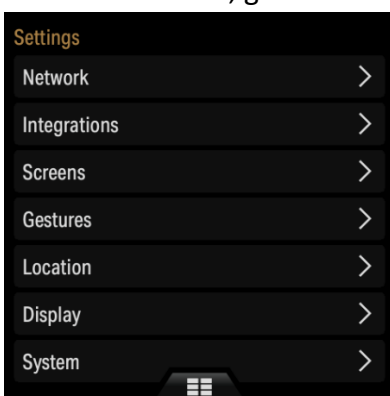




 3. Fill in the data (Serial Number & Authorisation code) and tap Submit.
4. Reboot the Rithum Switch via Settings > System > Reboot
5. To add the scenes go to Settings > Integrations > Add plugin > FIBARO Core plugin

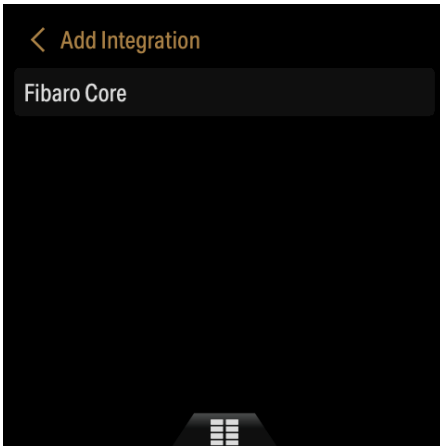

 6. Enter the login details of the FIBARO Home Center
7. Select the desired scenes.

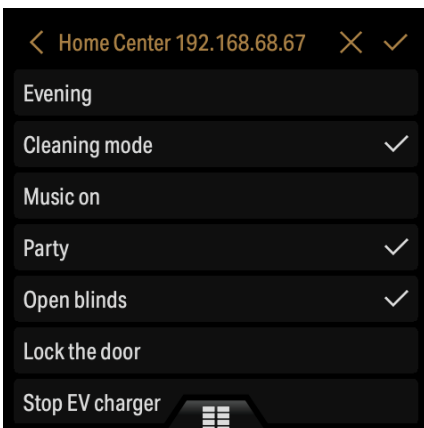

8. Tap the check mark to confirm.
9. Test the Rithum Switch by activating a scene.