 




MANUAL

Integration BlueOS/Lite with Rithum Switch

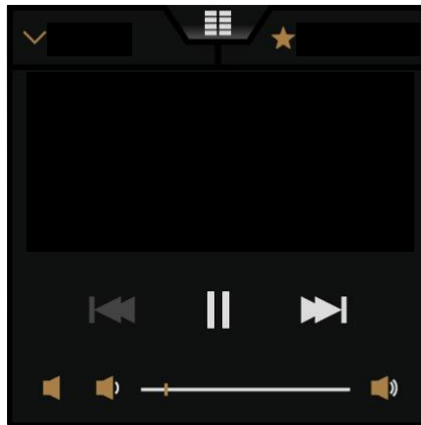

Version: 1.0

Date: 28-11-2023



Integration BluOS/Lite with Rithum Switch

This manual describes the steps for controlling BluOS/Lite with the Rithum Switch.

 
 
 
Requirements

- BlueSound & NAD with BluOS
- Rithum Switch
- Router with internet


BluOS/Lite with Rithum Switch

It is required to activate the Switch via a licence, follow the instruction below to activate the BluOS/Lite plugin for the corresponding Rithum Switch.

1. Purchase the licence and open the URL, fill in the details of the Rithum Switch
2. To do this, go to Settings > System > About

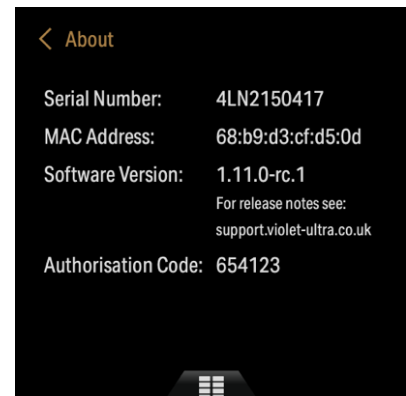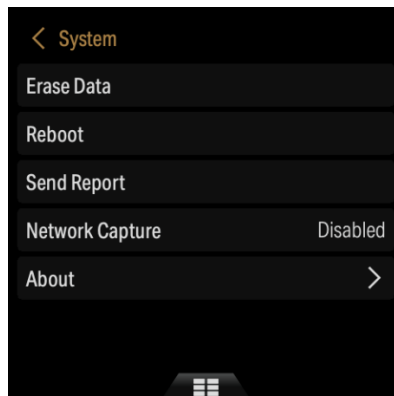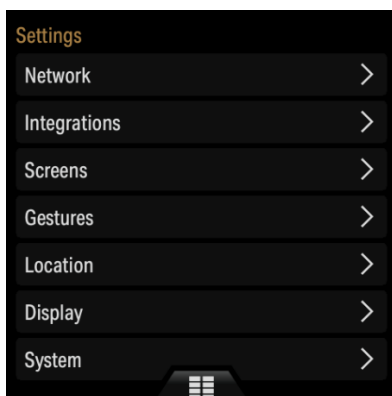

 3. Fill in the data (Serial Number & Authorisation code) and tap Submit
4. Reboot the Rithum Switch via Settings > System > Reboot
5. To add the zones go to Settings > Integrations > Add plugin > BluOS/Lite plugin

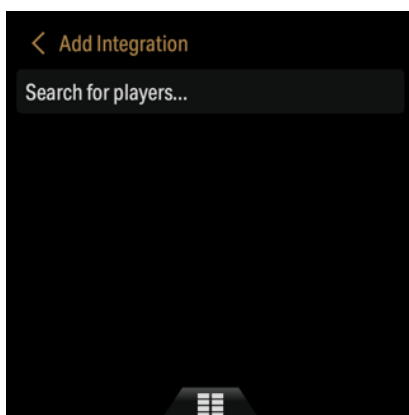



6. The Rithum Switch will search for available players and add a tab at the bottom of the screen

