

**akubela**  
Installation Guide  
IR Controller

Smarter Home, Sweeter Life

### Welcome to Akubela Home!

This installation guide will walk you through installing Akubela IR controller and putting it into pairing mode.

- Before We Start** ..... 2
- In The Box** ..... 4
- Product Overview** ..... 5
- Installation** ..... 6
- Pairing Mode** ..... 8
- Get Help** ..... 10

1

### Before We Start

Your first time installing Akubela IR controller may take up to 10 minutes.

You' ll get faster after each installation.

 
2

**Warning!**


Keep the device and all its parts out of the reach of children. The small parts or accessories contained may be a choking hazard to them.

3


### In The Box

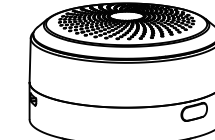


IR Controller x1

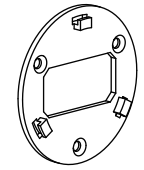 


Base x1

 


Screw x3

 

Wall Anchor x3



 
Double-sided Adhesive x2




Micro-USB Cable x1

4


### Product Overview

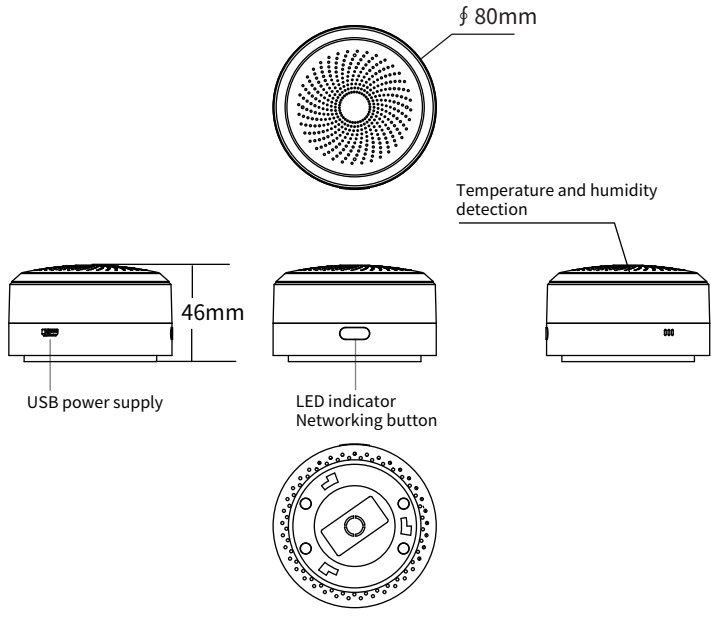 

5



Smarter Home, Sweeter Life



### Installation

You can place the IR controller on the desired location for immediate use, or use the provided double-sided adhesive or screws for mounting the device on a surface.

**Note**

 
To ensure the best performance, keep a direct and unobstructed line of sight between the receiver and the IR controller. Make sure the distance between them does not exceed 15 meters, and the optimal distance is within 7 meters.

6

### Placing IR Controller on a Table for Direct Use

- Place the controller on a flat and stable surface, such as a desk or table.
- Connect the device to a USB wall charger using the provided USB cable. Make sure that the wall charger has a DC output of 5V/1A.

### Mounting IR controller with Double-sided Tape

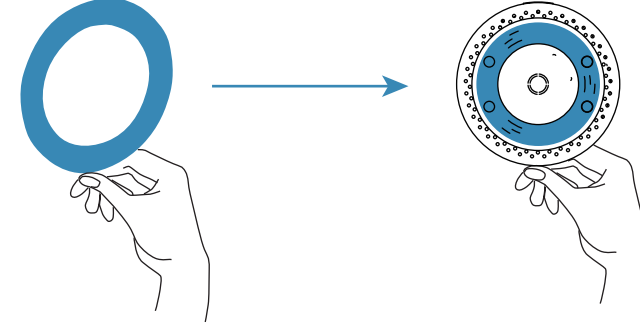

- Make sure the surface is clean and dry before applying adhesive.
- Apply the included 3M double-sided tape to the bottom of the controller.
- Remove the other backing.
- Press the device firmly with both hands for 30 seconds to secure it in place.

7

### Mounting IR controller with Screws

- Use the base mounting holes as a template to mark the desired location.
- Drill holes at the marked positions with a diameter of 5 mm and a depth of 25 mm. Insert wall anchors into the holes.
- Secure the base using the provided screws.
- Align the notches on the bottom of the controller with the clips on the base, and press the device down to attach it securely.

**Note**

Before pairing the IR controller, ensure that your HyPanel series devices are installed and have completed their initial setups, as the controller must be used with HyPanel series devices.

8

### Putting IR controller into pairing mode

- Power the controller by connecting it to a wall charger using the included USB cable. The charger must have a DC output of 5V/1A.
- Press and hold the button on the side of the controller until a green indicator light blinks slowly and a beep sound is heard. The controller enters the pairing mode.

To add the IR controller to your HyPanel series devices, use either BelaHome app or HyPanel devices.

- Once successfully paired, a beep sound will be heard, and a green indicator light will be on for 5 seconds. Alternatively, you can see the IR controller on the panel you want to pair it with.
- If the pairing process is unsuccessful, 2 beep sounds will be heard and a red light will be on for 5 seconds.

9

### Congratulations!

You are done with the installation!

**Get Help**

Need help or more information?  
Visit us at:  
<https://ticket.akuvox.com/>

10